



# Remote Oil Filter Mounts

22-620 - 22-625

**Oil Return Ports  
(line back to Engine)**

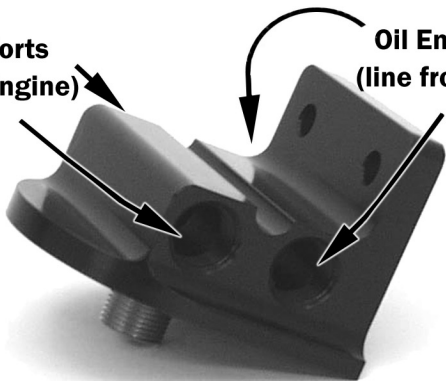

**Oil Entry Ports  
(line from Engine)**

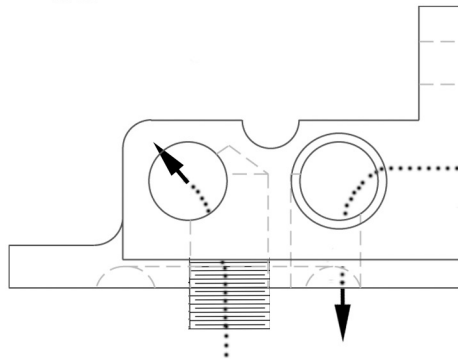

**Oil Entry**  
Oil from engine enters  
adapter and flows  
to outside of filter

**Filtered oil back to engine**

**Note:** If installing an accusump into this mount, it is best to install it on the unused oil return port.