




## Installation Instructions



### Tools required

- 5mm socket
- 7mm socket
- Bojo (or plastic pry tool)

Before:

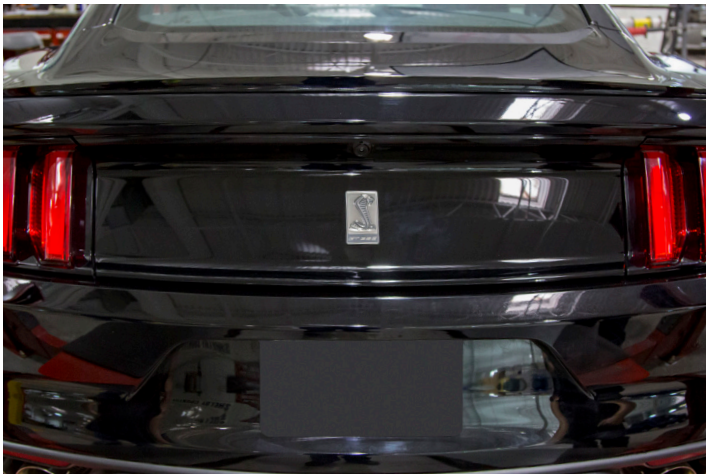

After:





## Instructions

Step 1 - After opening the trunk, remove the (2) plastic covers (one on each side) from the underside of trunk lid for access to the 7mm bolts. Remove the (4) 7mm bolts (two on each side).



Step 2- Using a Bojo (or plastic pry tool) pry off the stock tail light panel, starting on the left-hand side. Insert pry tool between panel and trunk lid at the top corner and visually locate the first clip. Position the pry tool near the clip, and with some effort, pull the pry tool toward yourself to pop the clip out. Use the same procedure for the next clip in. The third clip on this side is next to the camera. This is a different kind of clip. For this clip, you'll need to press down on the clip with your pry tool to release it.

**Repeat these steps for the right side of the panel.**






**Step 3** - Next you will need to release the harness from the camera. Do this by pressing down on the lever on the right-hand side of the harness (shown already removed below for a better image)



**\*TECH TIP – Take note of the exact orientation of the camera. You will need to install it in the same manner in your new Shelby panel. If you don't, your camera's image will be upside down.**

Got it? Ok, now remove the (2) 5.5mm bolts

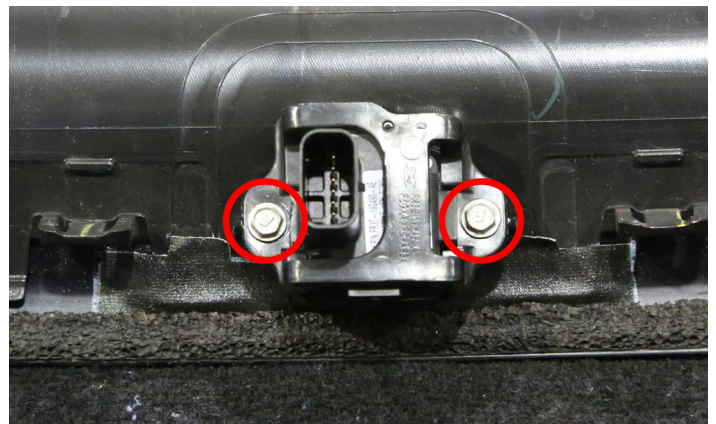

**Step 4**- Install the camera on your new Shelby panel using the (2) 5.5mm bolts that you just removed. Remember to reinstall in the same orientation as on the stock panel.


Clip the harness back onto the camera.

If you're a little unsure about the orientation, before you put everything back together, it may be a good idea to simply tape the panel in place, start up your Mustang and put it in reverse to check your camera's orientation.

Now you are ready to reinstall your new Shelby Tail Light Panel!



Step 5 - Line-up and insert the tabs on the back of the Shelby panel (circled in yellow) to the corresponding slots on the truck lid (circled in red). Now press the upper clips back into place.

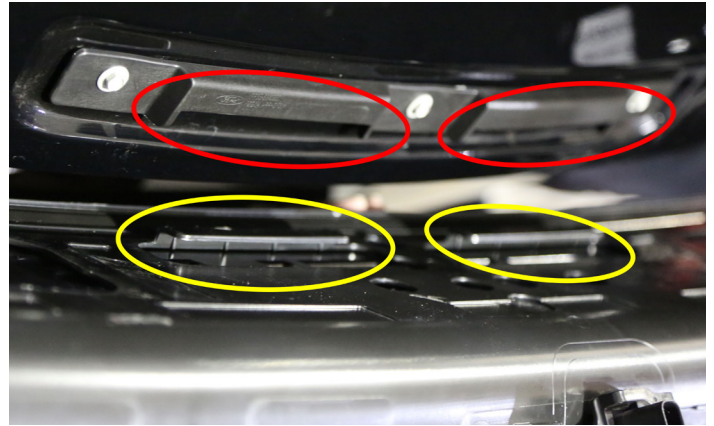

Step 6 - Reinstall the (4) 7mm bolts and (2) plastic covers.



All Done! Close the trunk.

Now you're looking like a Super Snake!

