

2015 Up Ford S550 Mustang Carbon Fiber Mirror Note **[CBM-MUSTG15]**


Part List:

2 X Carbon Fiber Mirror Housing

Installation Time:

30-45 mins



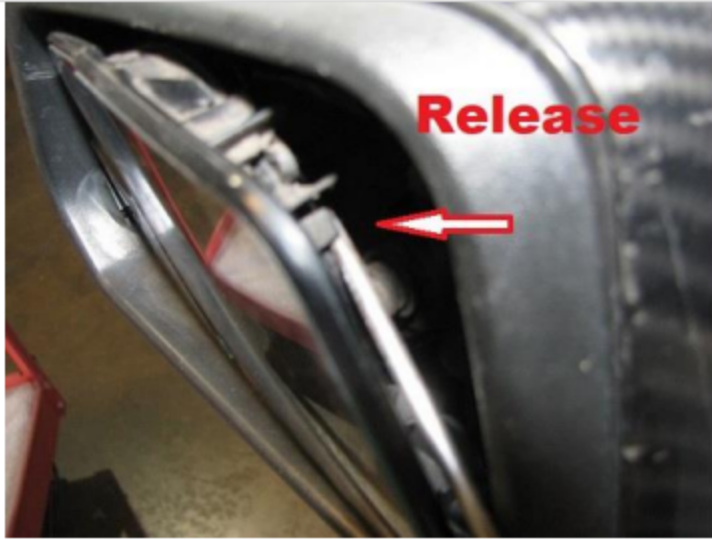

1. Start with the left side mirror. Fold the mirror lens outwards. This will allow you to see the internal mechanism.



2. Look for few short clip tabs on the back side lens where it clip to mirror motor base. Use a small flat screwdriver to release each of them while you are holding the lens with your other hand.



3. A quick look where those short clip tabs located on the lens.



4. After lens is removed, look for 2 small tox screws hold the front plastic housing cover. Remove both tox screws.



5. Use two flat-head screw drivers insert both to the right side rectangular holes to release the clip.



6. Same procedure to the left side clip. See photo.



7. Remove front mirror housing cover off.



8. Look for 2 long tabs on the top side of the inner housing. Use a flat screw driver to release them.



9. Try to slide the mirror cover towards the car to move the cover completely.
10. Reverse steps for carbon fiber mirror cover installation. Repeat step to other right side mirror.

Now installation is complete.