




**SHELBY
PERFORMANCE
PARTS**


Shelby Weighted Shift Knob by
Billetwerkz Installation Instructions

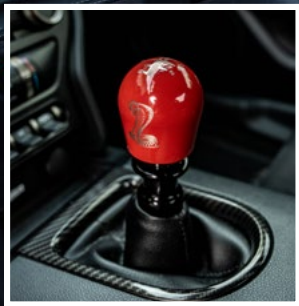


First things first



INSTALL JAM NUT, THEN THREADED INSERT ONTO THE SHIFTER.

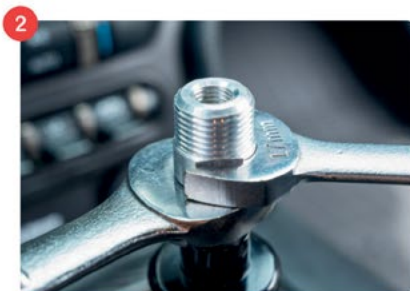

TIGHTEN THE JAM NUT & THREADED INSERT TOGETHER USING 1-2 WRENCH(ES). IF NOT TIGHTENED PROPERLY INSERT MAY GET STUCK IN THE SHIFT KNOB

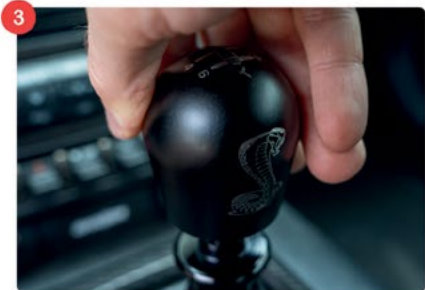

INSTALL THE SHIFT KNOB ONTO THE THREADED INSERT. IF THE ENGRAVING IS CROOKED, REMOVE THE SHIFT KNOB & ADJUST THE JAM NUT & THREADED INSERT



REINSTALL THE SHIFT KNOB ONTO THE THREADED INSERT. REPEAT UNTIL ENGRAVING IS ALIGNED STRAIGHT.

SHELBY

Shelby American demands the best, *just like you.*

As a leader in bespoke custom shift knobs, Billetworkz is proud to partner with Shelby American.

Each shift knob is meticulously engineered from high-quality materials, ensuring unparalleled precision, and designed to *elevate your driving experience.*

