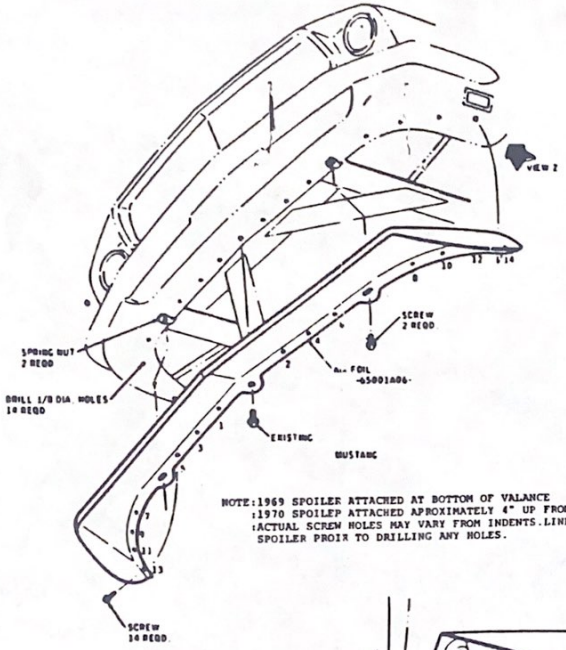

NOTE:1969 SPOILER ATTACHED AT BOTTOM OF VALANCE
:1970 SPOILER ATTACHED APROXIMATELY 4" UP FROM BOTTOM
:ACTUAL SCREW HOLES MAY VARY FROM INDENTS.LINE UP
SPOILER PROIR TO DRILLING ANY HOLES.

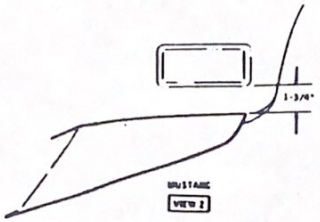

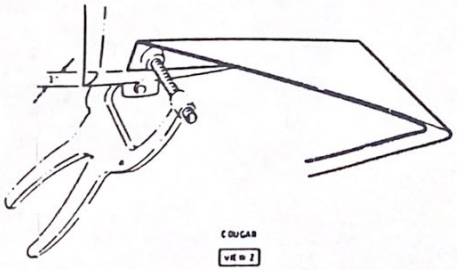

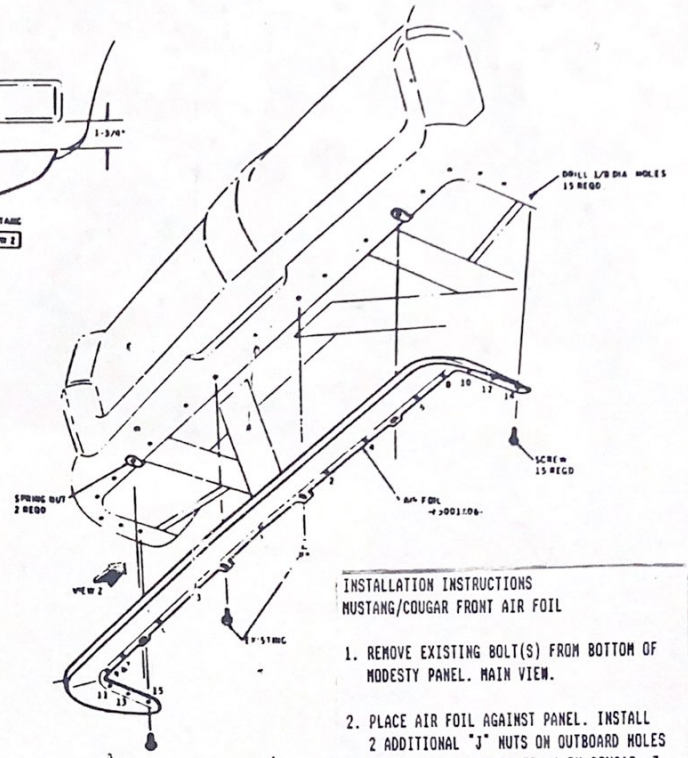

INSTALLATION INSTRUCTIONS
MUSTANG/COUGAR FRONT AIR FOIL

1. REMOVE EXISTING BOLT(S) FROM BOTTOM OF MODESTY PANEL. MAIN VIEW.

2. PLACE AIR FOIL AGAINST PANEL. INSTALL 2 ADDITIONAL "J" NUTS ON OUTBOARD HOLES & ATTACHING MAIN BOLTS: 4 ON COUGAR, 3 ON MUSTANG.

3. USING AIR FOIL AS TEMPLATE, DRILL 1/8 DIA. HOLES & INSTALL SCREWS IN ORDER SHOWN IN SKETCH. NOTE: ALL SCREWS MUST BE USED FOR FIRM INSTALLATION

MUSTANG & COUGAR

I.S. 3495

INSTALLATION - KIT - AIR FOIL
FRONT